


WARNING

The information in this quick guide is subject to change due to product updates or other reasons. This guide cannot replace the product labels or the safety precautions in the user manual unless otherwise specified. All descriptions in the manual are for guidance only.


01 Networking

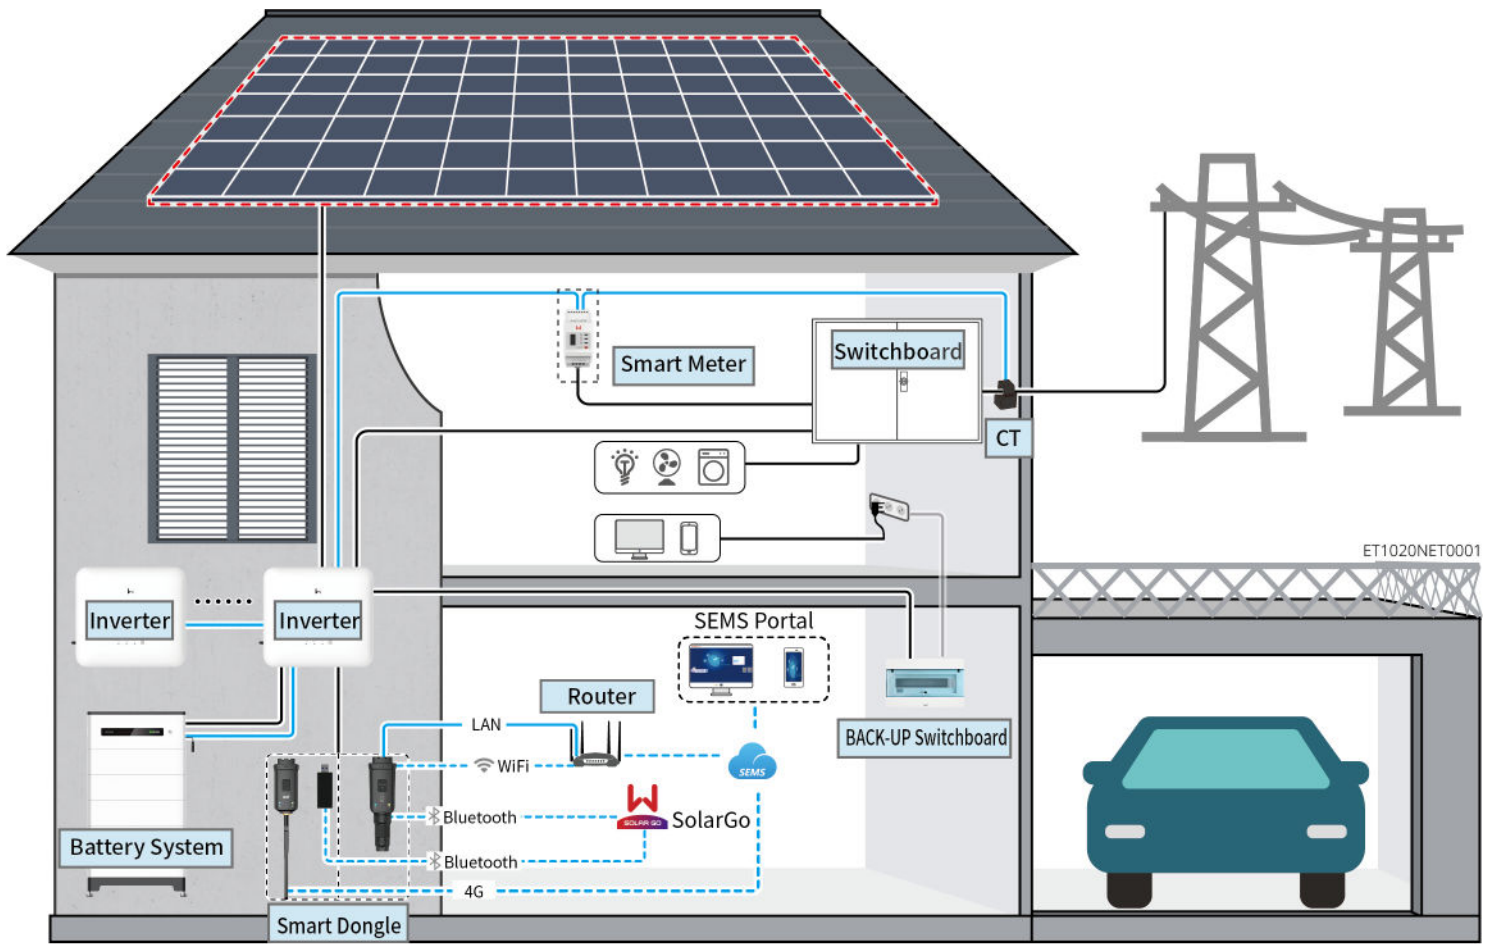

Device	Model	Description
Inverter	GW6000-ET-20, GW8000-ET-20, GW9900-ET-20, GW10K-ET-20, GW12K-ET-20, GW15K-ET-20	A maximum of 4 inverters can be connected in a parallel system. Inverter firmware requirements for parallel connections: - Consistent firmware version - ARM version: 01.389 or above - DSP version: 01.15 or above
Battery system	Lynx Home F (G1) Lynx Home F (G1 Plus+) LX F6.6-H LX F9.8-H LX F13.1-H LX F16.4-H	Lynx Home D LX D5.0-10 - A maximum of 8 battery systems can be clustered in a system. - Do not mix connect battery systems of different versions.

Device	Model	Description
Smart Meter (Optional)	GM3000 GM330	- The inverter has a built-in smart meter, and CT cannot be changed. CT ratio: 90A/90mA - GM3000: GM3000 and the CT, which cannot be replaced, are included in the inverter package. CT ratio: 120A/40mA. - CM330: order the CT for GM330 from GoodWe or other suppliers. CT ratio: nA/5A. - nA: CT primary input current, n ranges from 200 to 5000. 5A: CT Secondary input current.
Smart Dongle	WiFi/LAN Kit-20 4G Kit-EC or 4G Kit-AU Ezlink3000	- In single scenarios, please use WiFi/LAN Kit-20, 4G Kit-EC, or 4G Kit-AU modules. - In parallel scenarios, the EzLink 3000 must be connected to the master inverter. Do not connect any communication module to the slave inverters. The firmware version of EzLink should be 04 or above.

02 Power On/Off

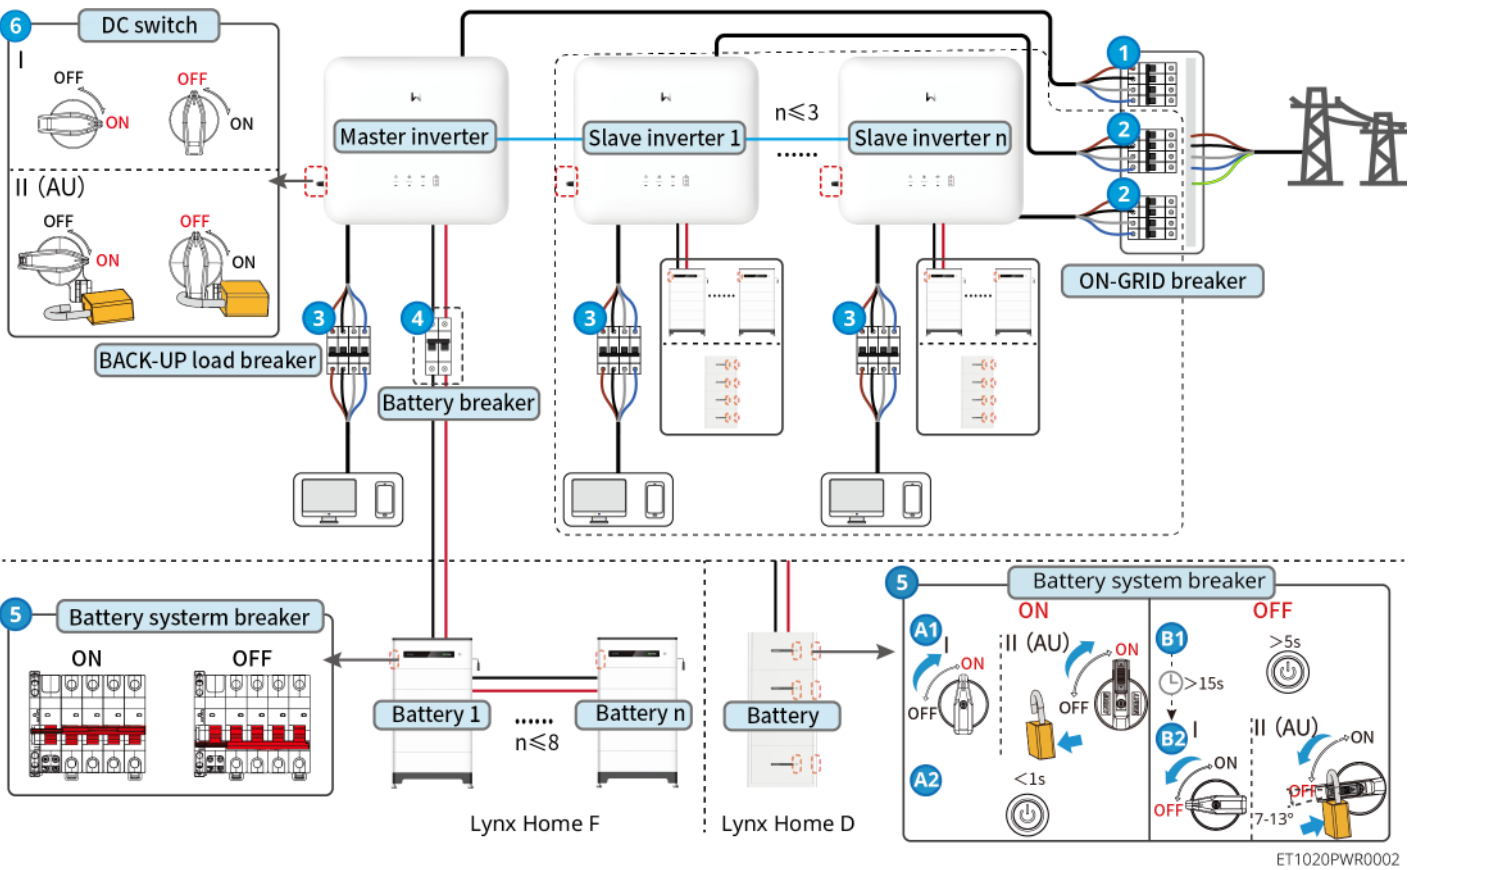

03 Installations


Steps	1 Installation	2 PE	3 PV	4 Battery	5 AC	6 COM	7 Communication module		
Inverter							Bluetooth Module	WiFi/LAN Kit-20	Ezlink3000
Tools	1 D: 80mm φ: 8mm 2 M5 1.2-2N·m	M5 1.5-2N·m	Recommend: PV-CZM-61100	Recommend: YQK-70	2 M5 1.5-2N·m Or		4G Kit-EC 4G Kit-AU		


Steps	1 Installation				2 PE	3 Battery			4 COM	
Battery	Lynx Home F (G1)	Lynx Home F (G1 Plus+)	Lynx Home D		Lynx Home F Lynx Home D	Lynx Home F (G1)	Lynx Home F (G1 Plus+)	Lynx Home D	Lynx Home F	Lynx Home D
Tools	 D: 80mm φ: 10mm ST5.5 4N·m M5 4N·m	 D: 80mm φ: 10mm ST5.5 4N·m M5 4N·m	 D: 60mm φ: 15mm M12 45N·m M6 5N·m M5 4N·m	 M6 6-7N·m M5 4N·m	 M6 6-7N·m M5 4N·m	 Recommend: YQK-70	 Recommend: YQK-70	 Recommend: YQK-70		


Steps	1 Installation	2 Cable Connections		3 Power	4 Commissioning	
Smart meter	GM3000 GM330	GM3000	GM330	AC breaker	 SolarGo APP SEMS Portal APP SEMS Portal WEB	


04 Wiring Diagram


ET G2 6-15kW (single) + Lynx Home F + WiFi/LAN or 4G

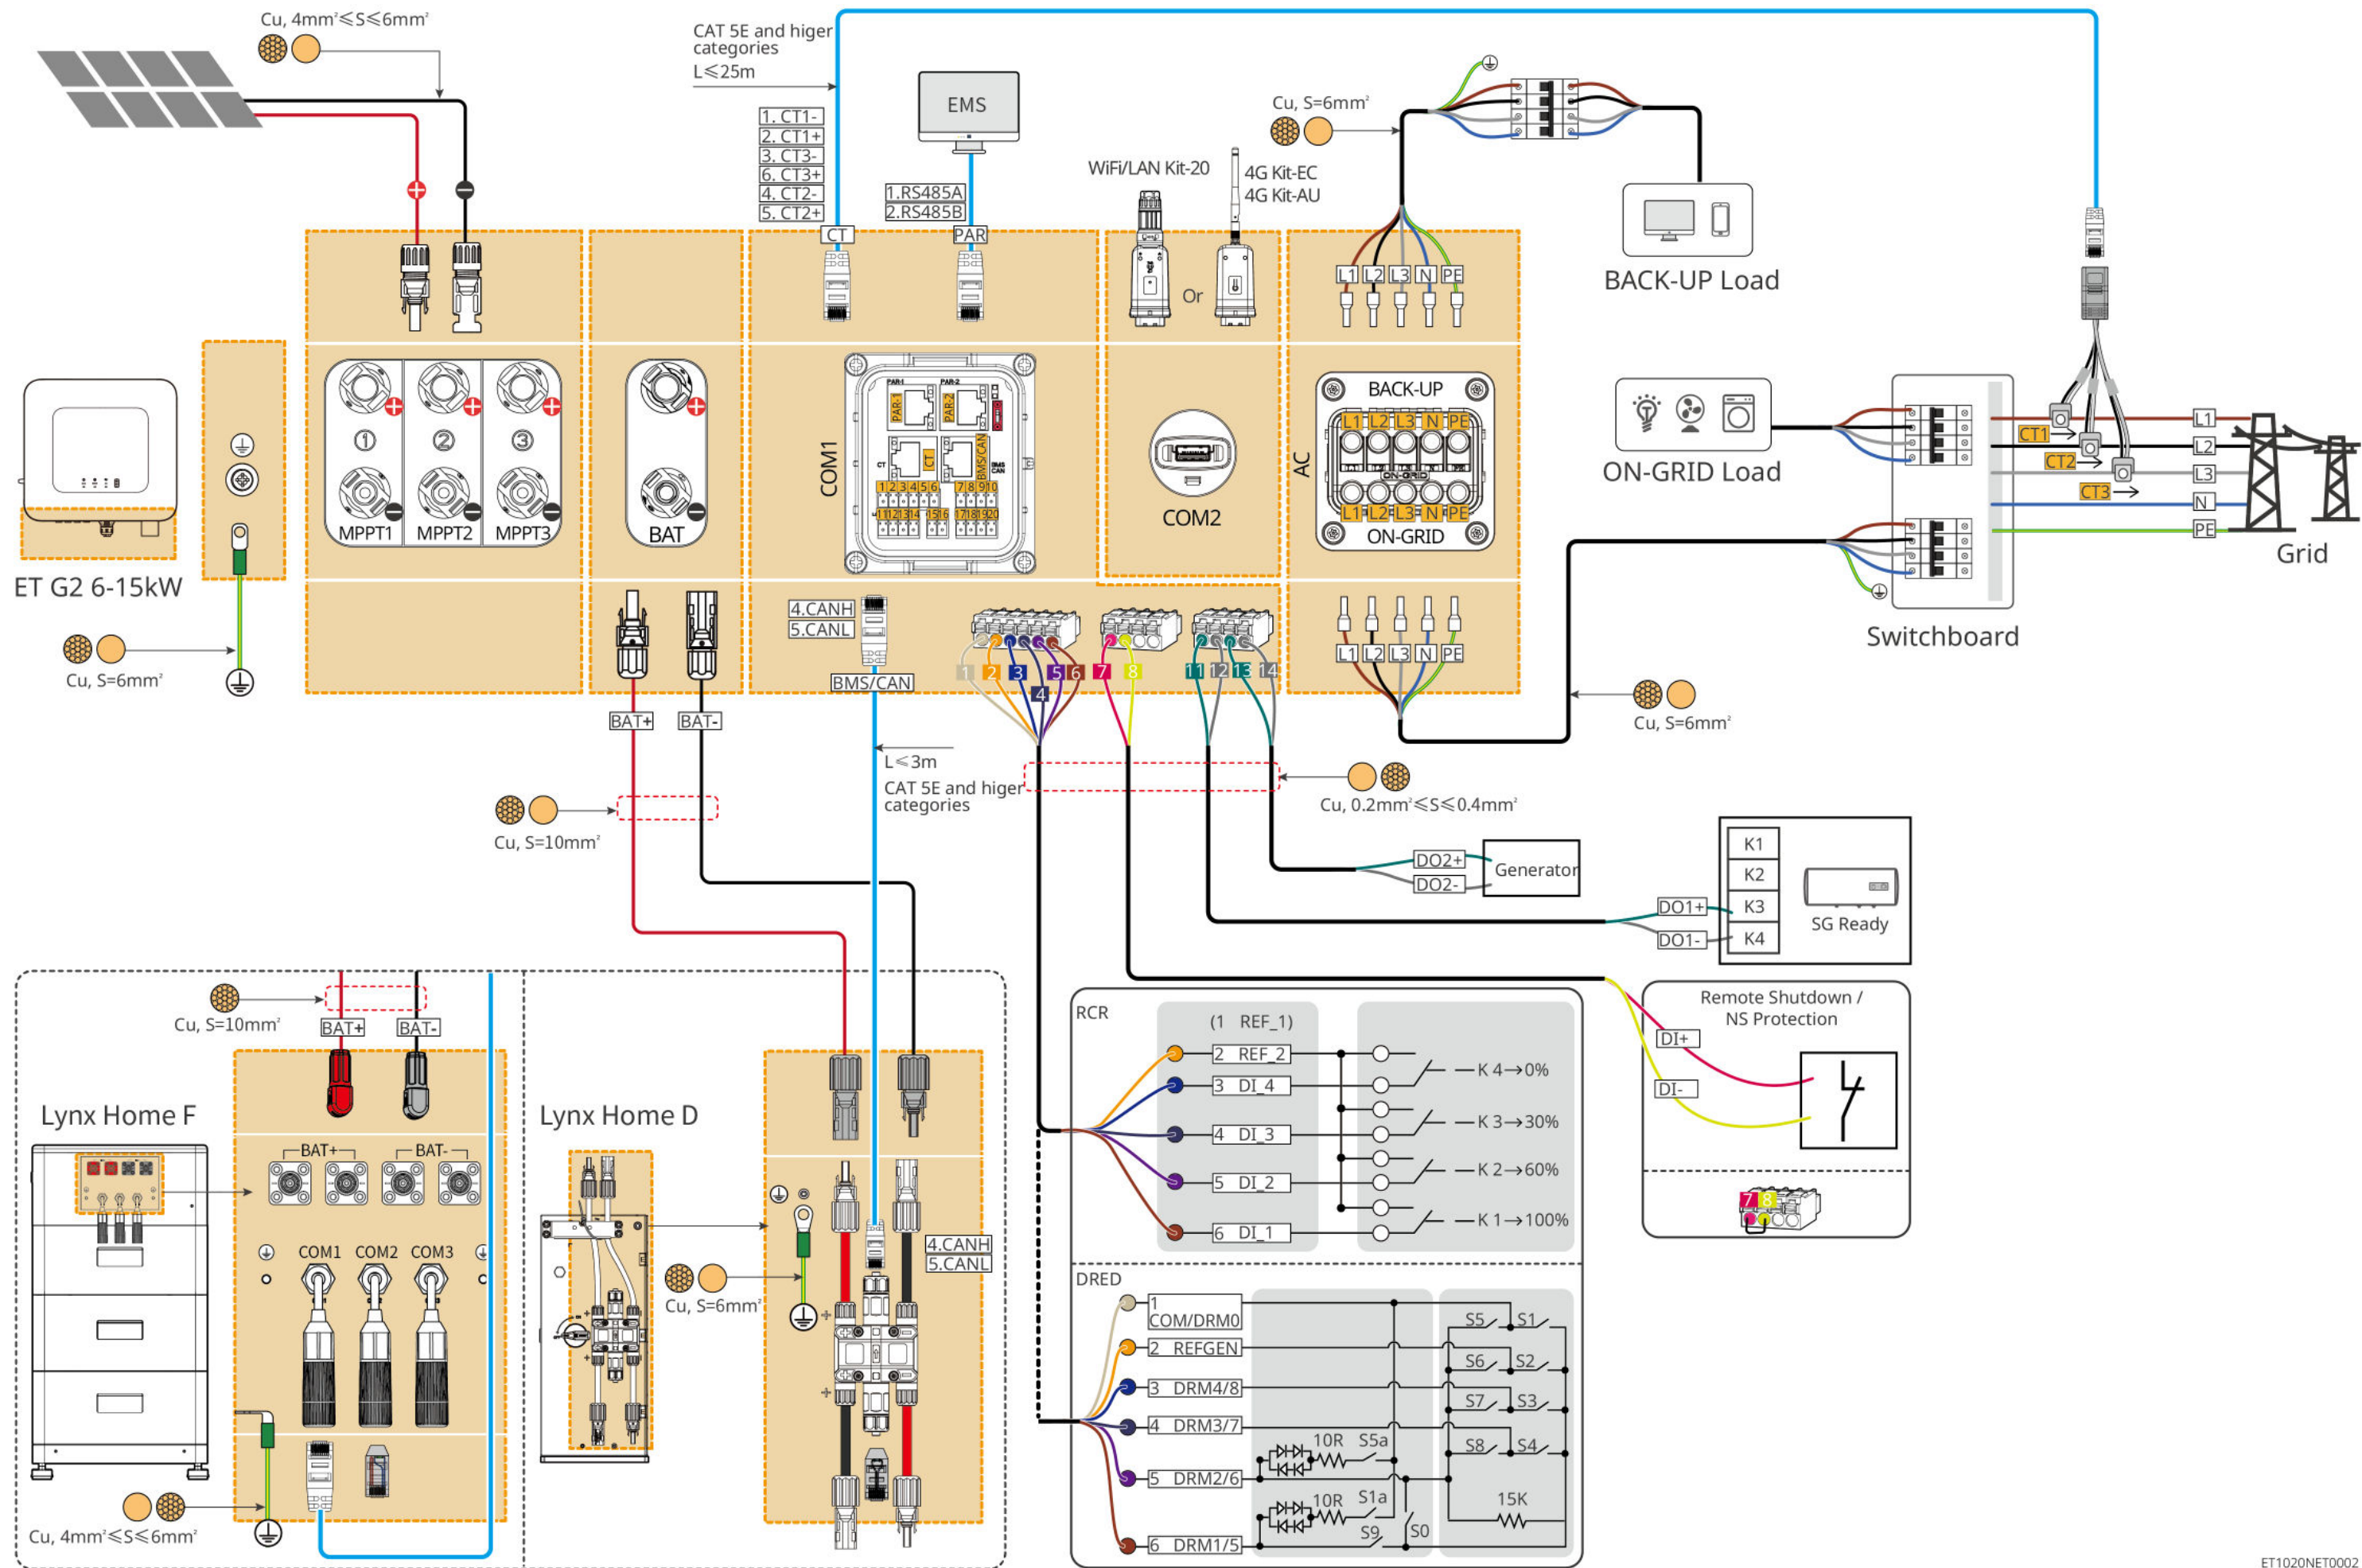



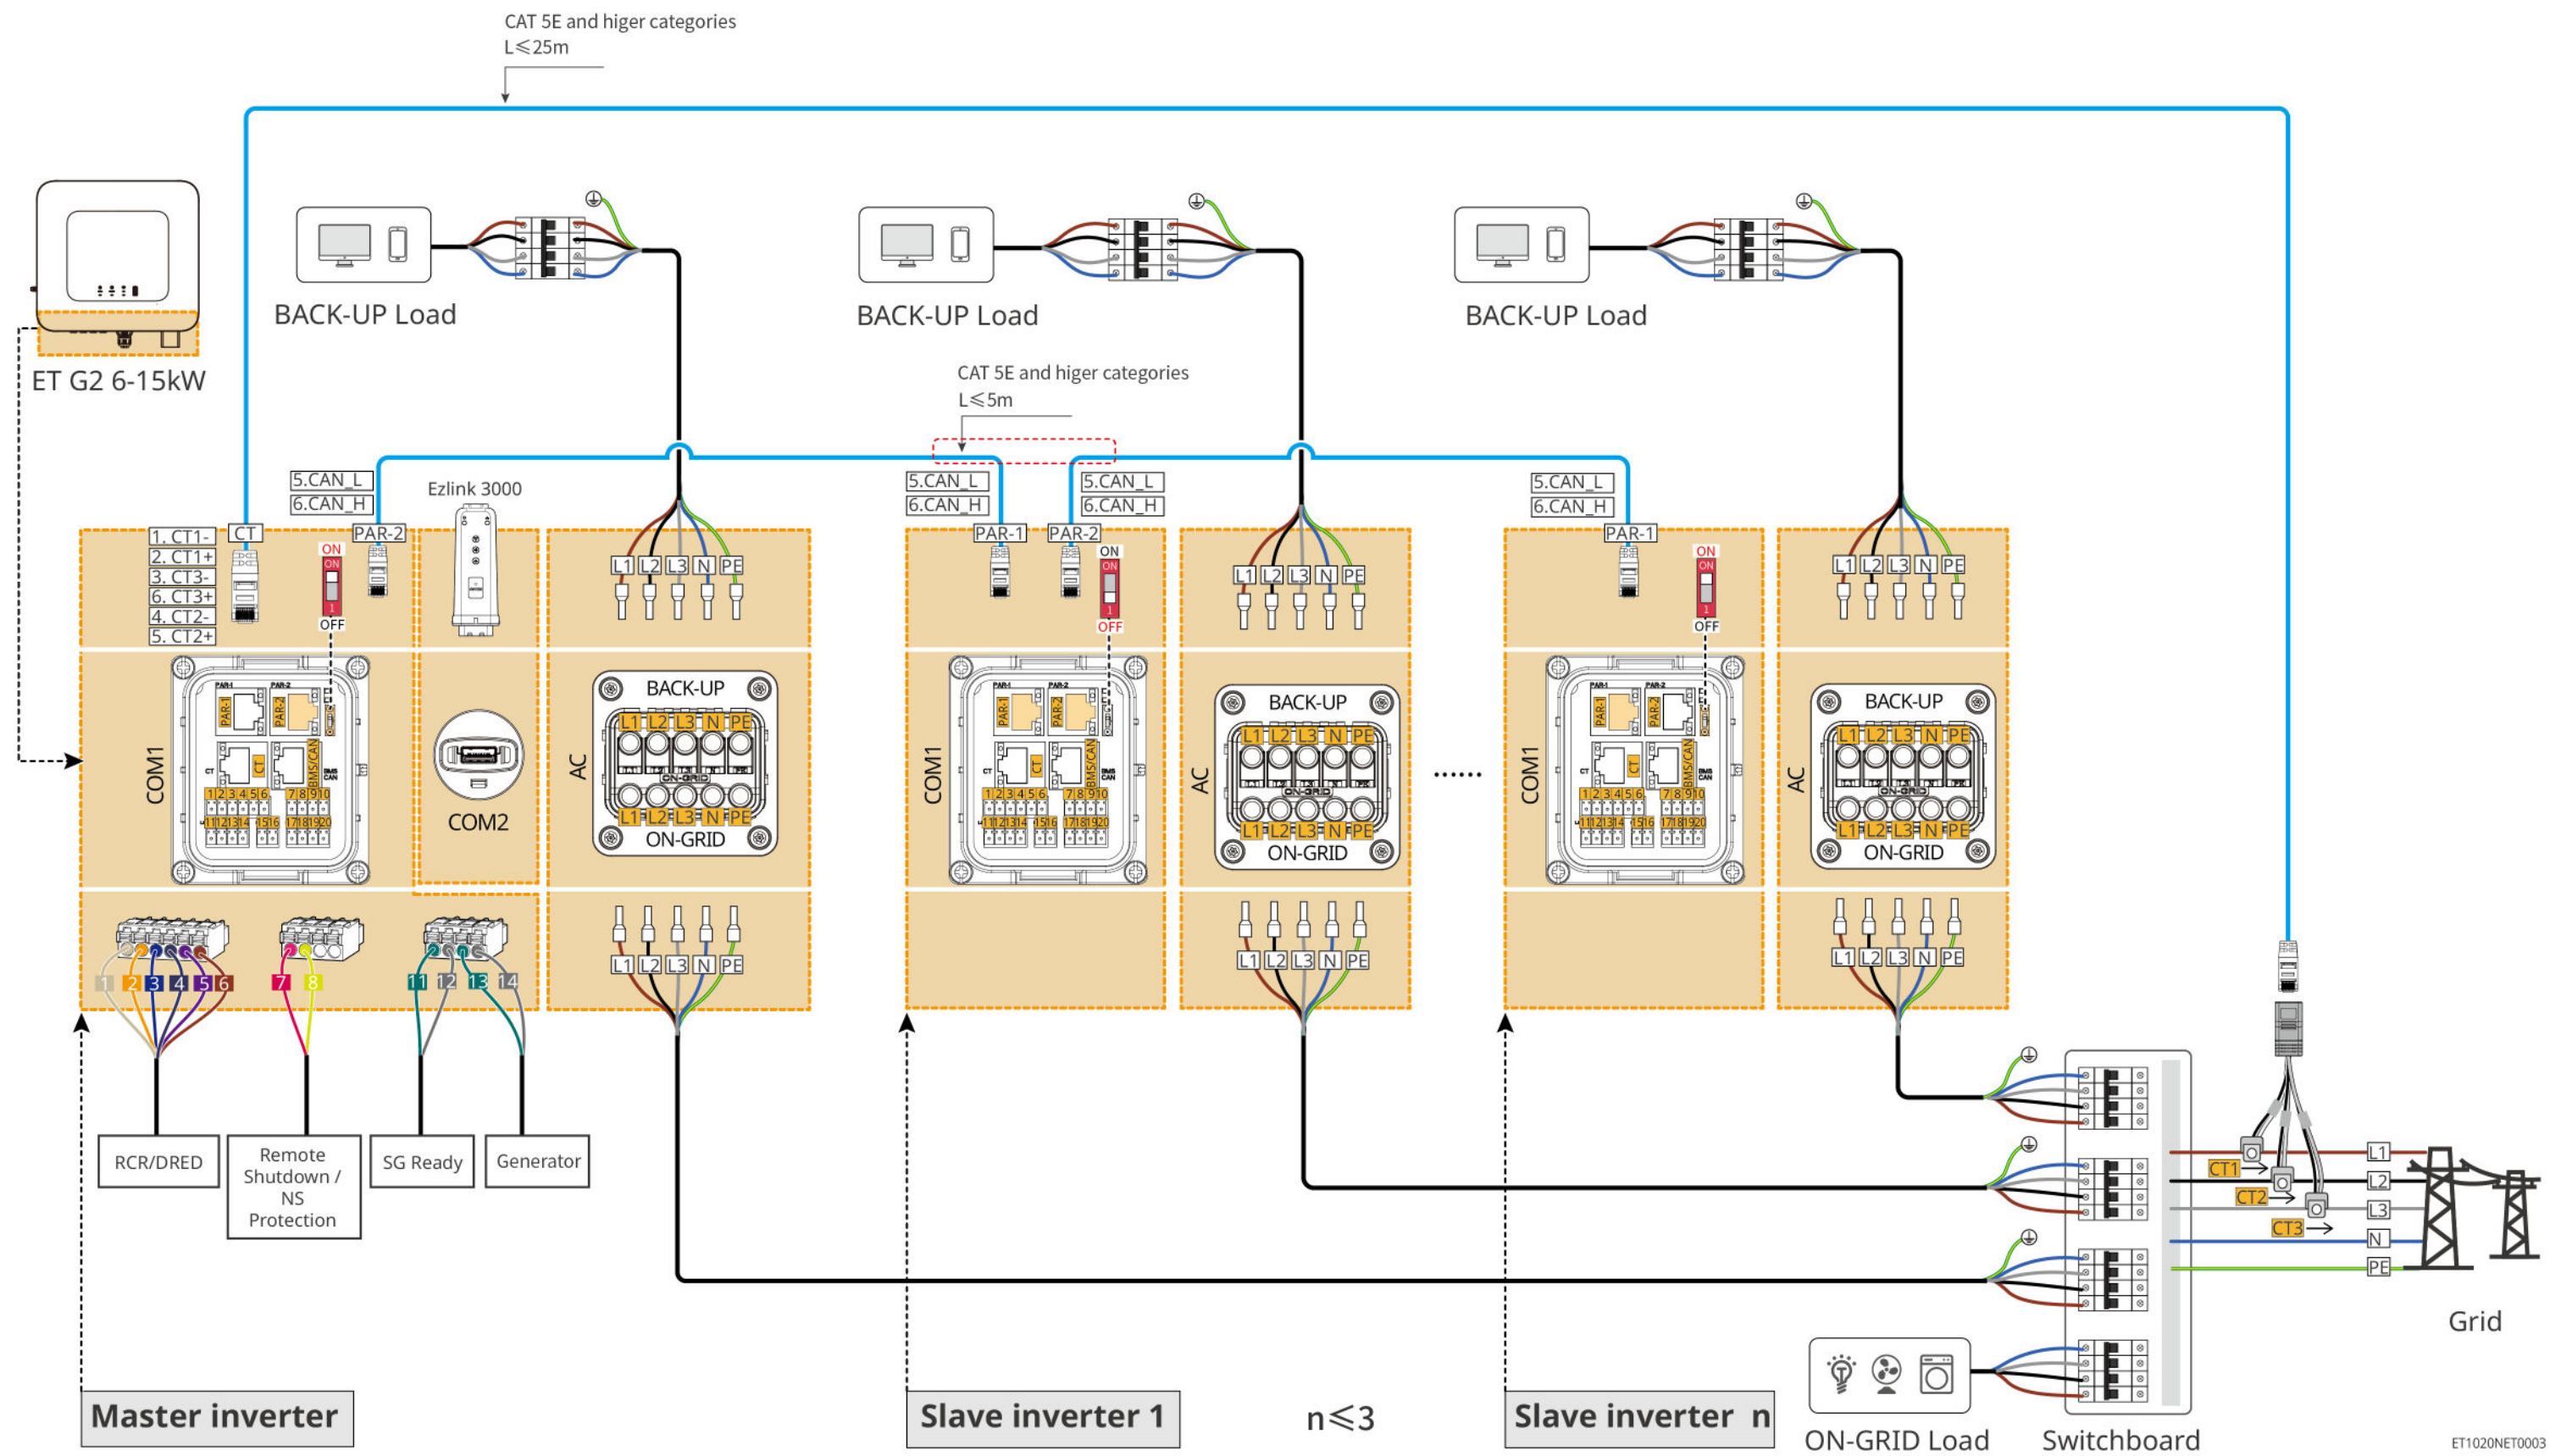


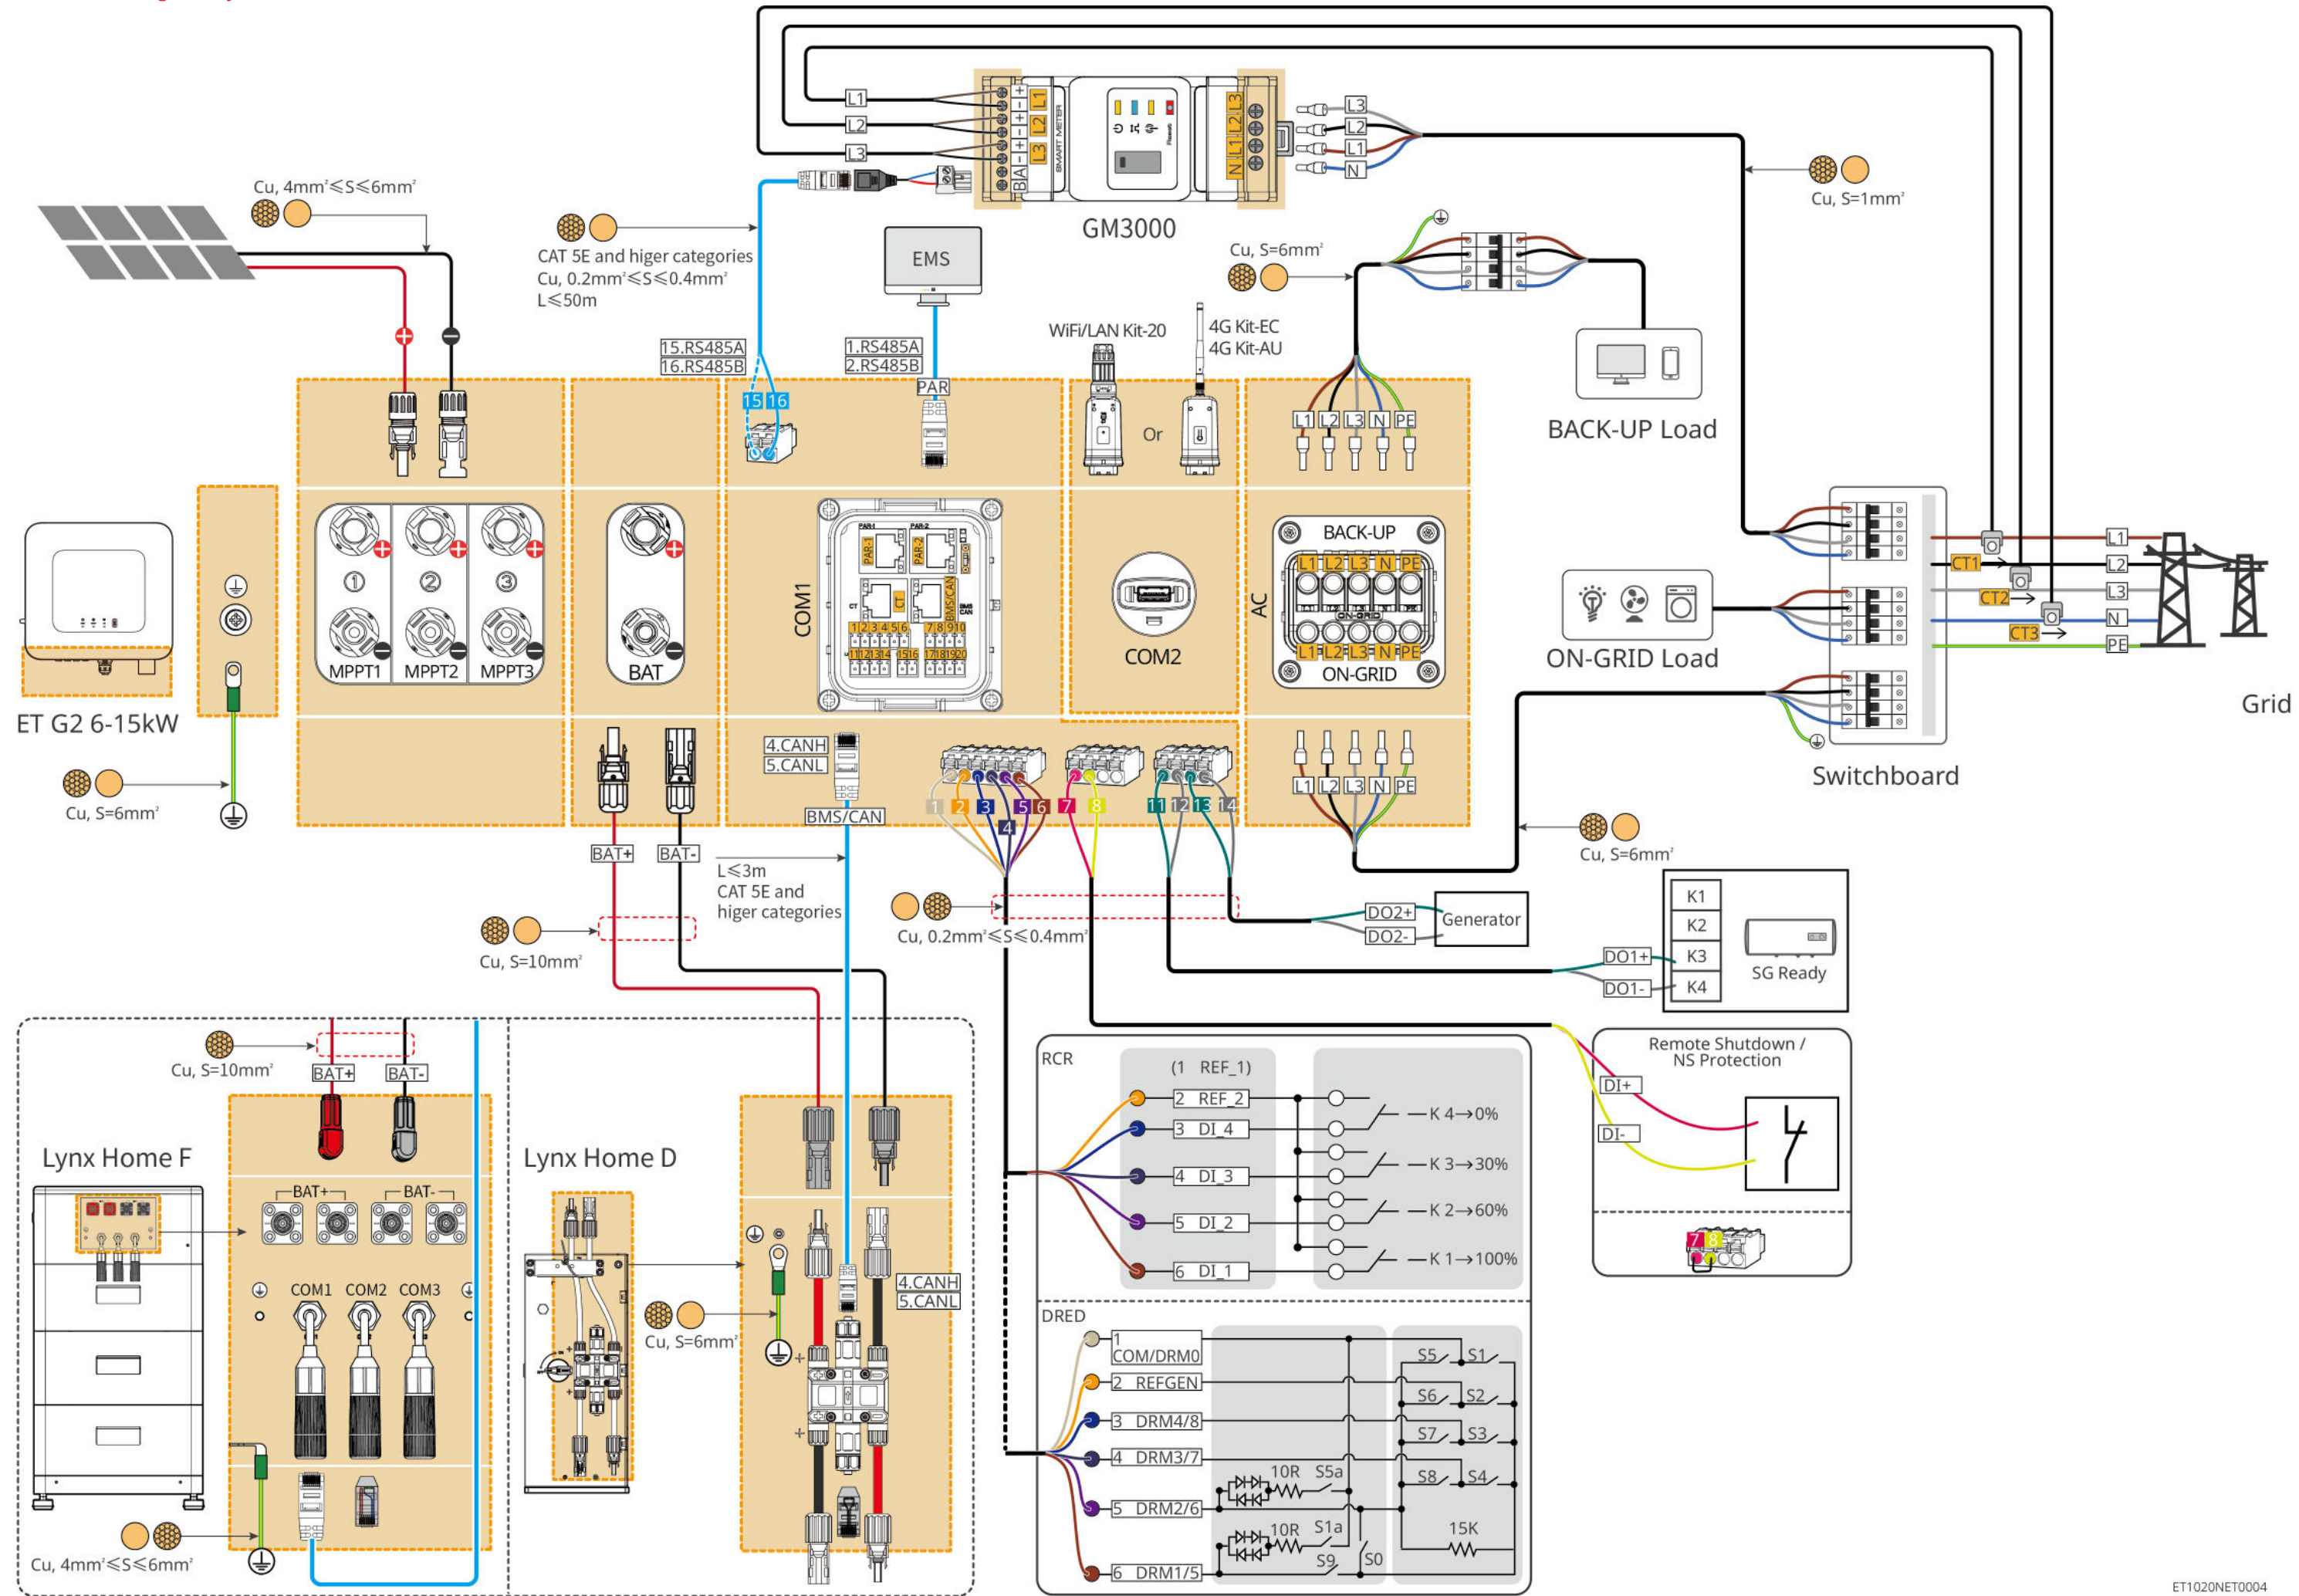


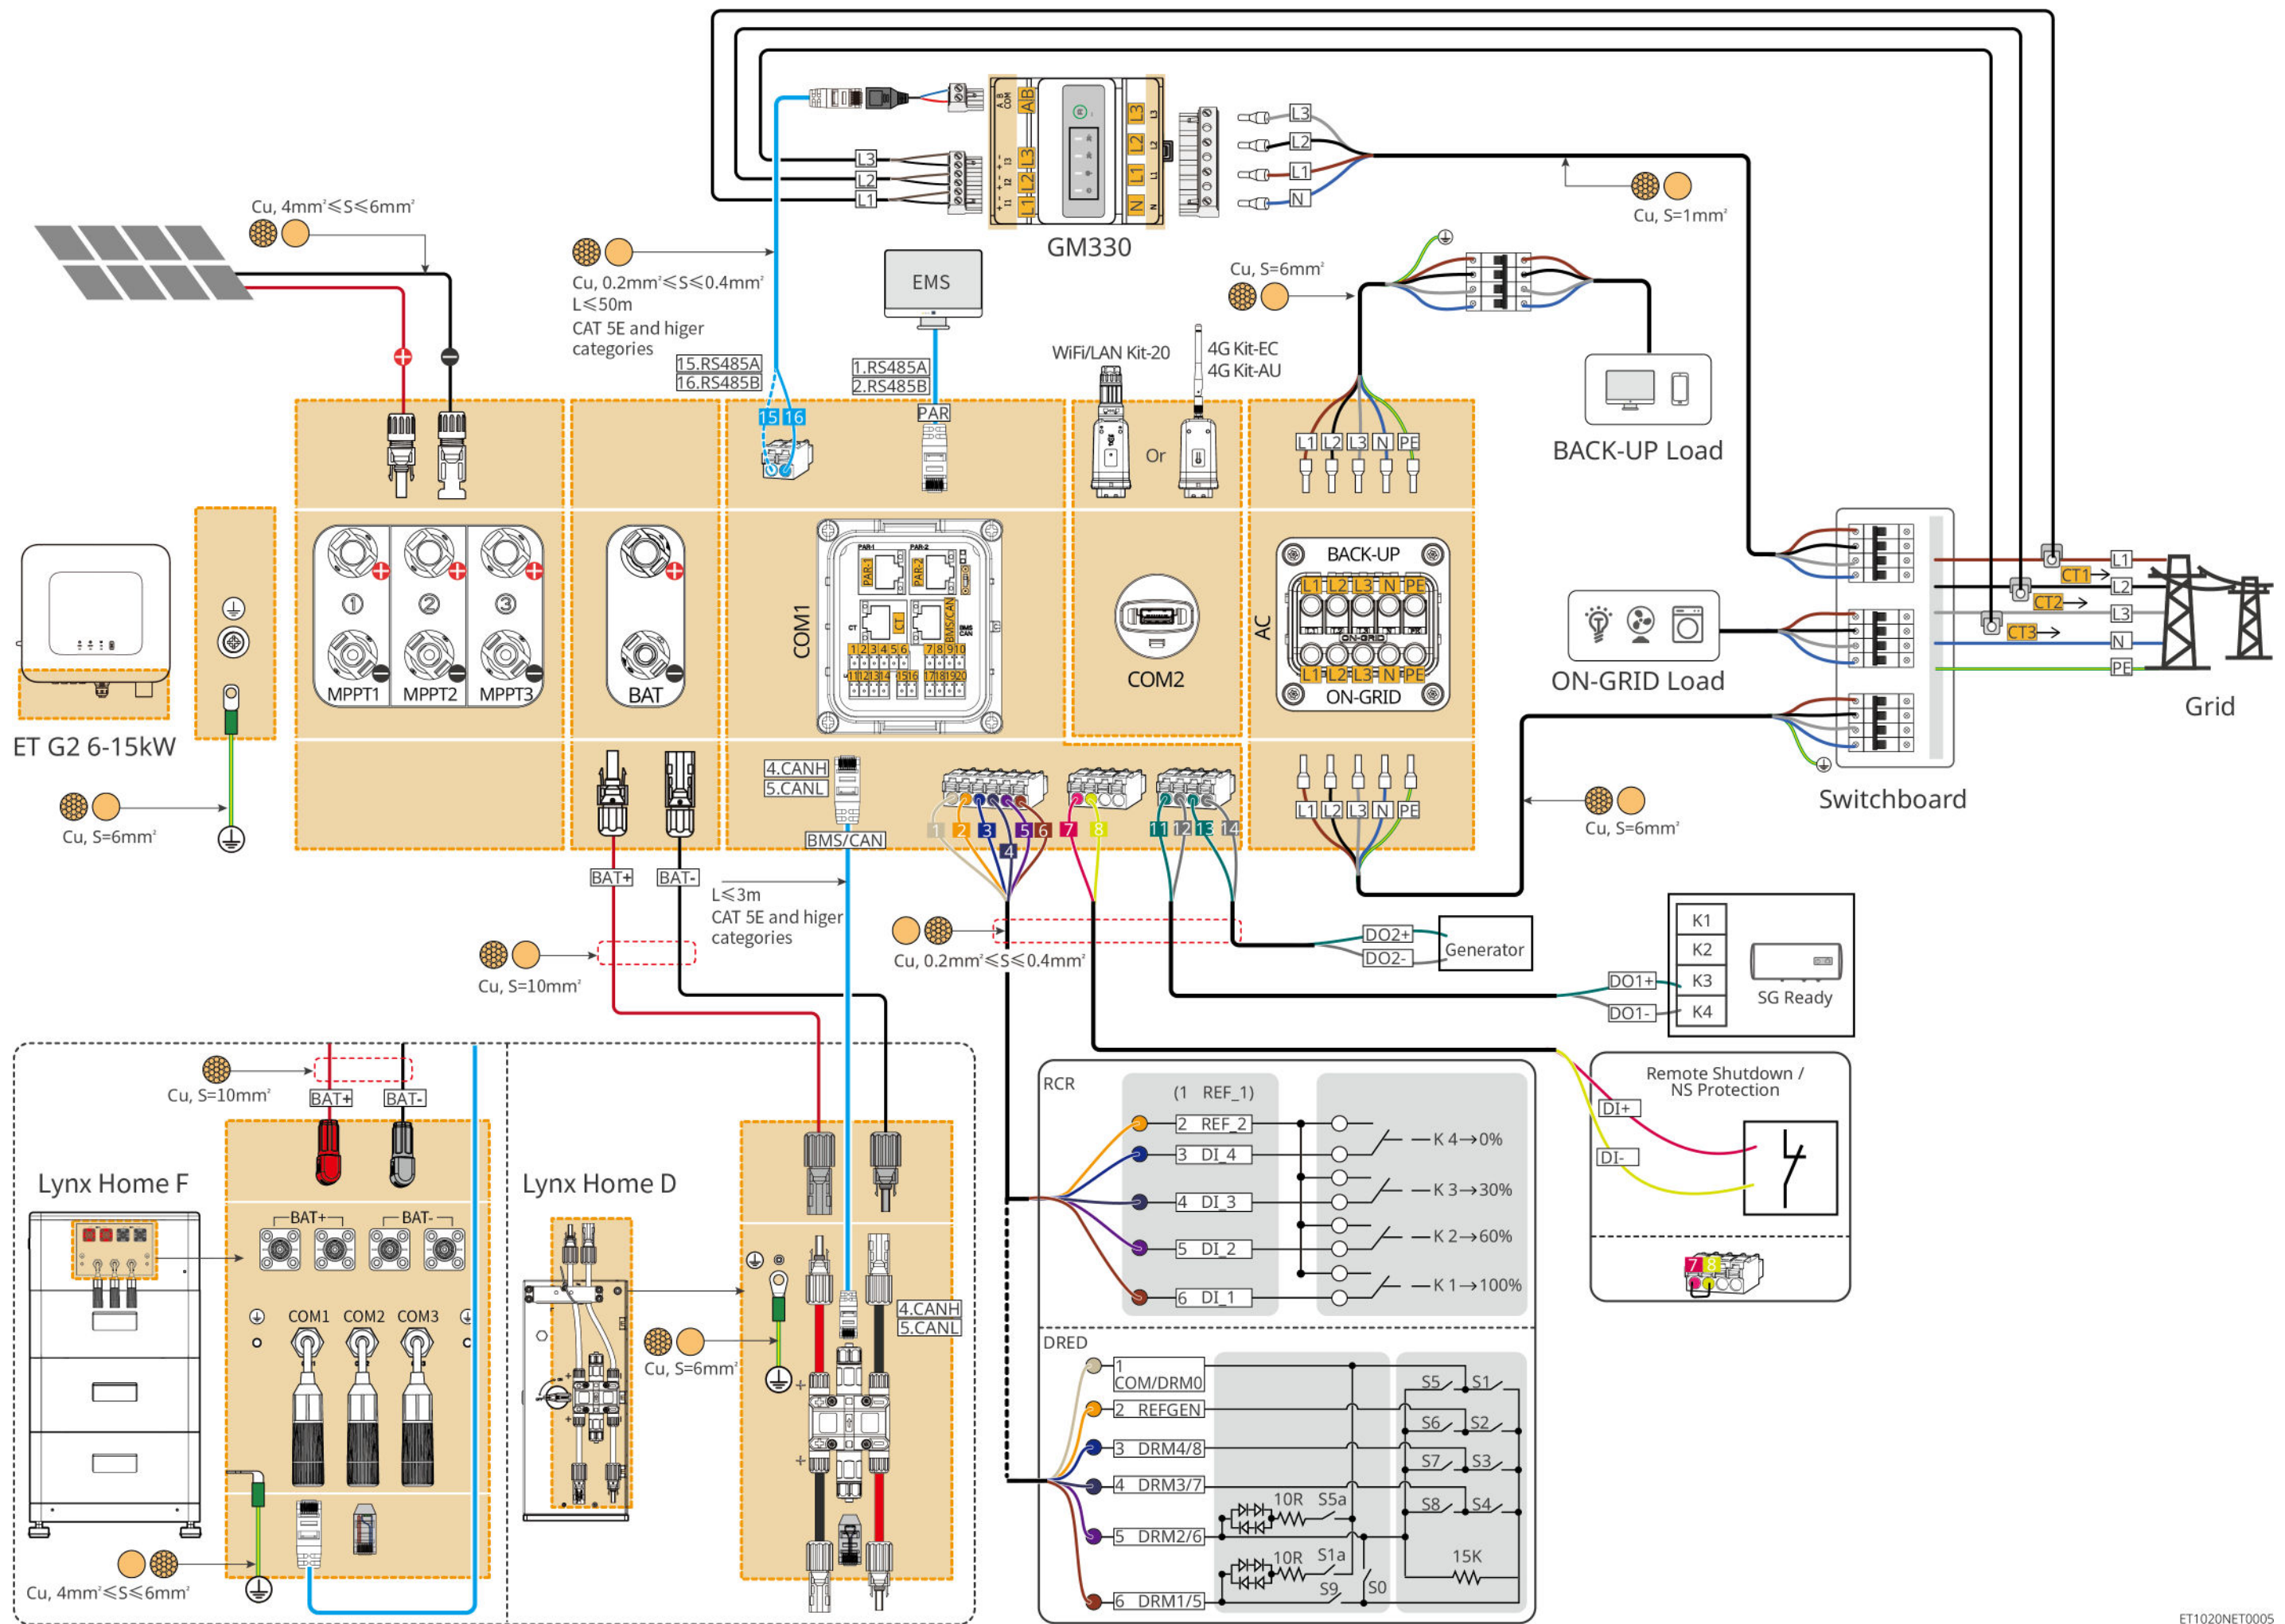


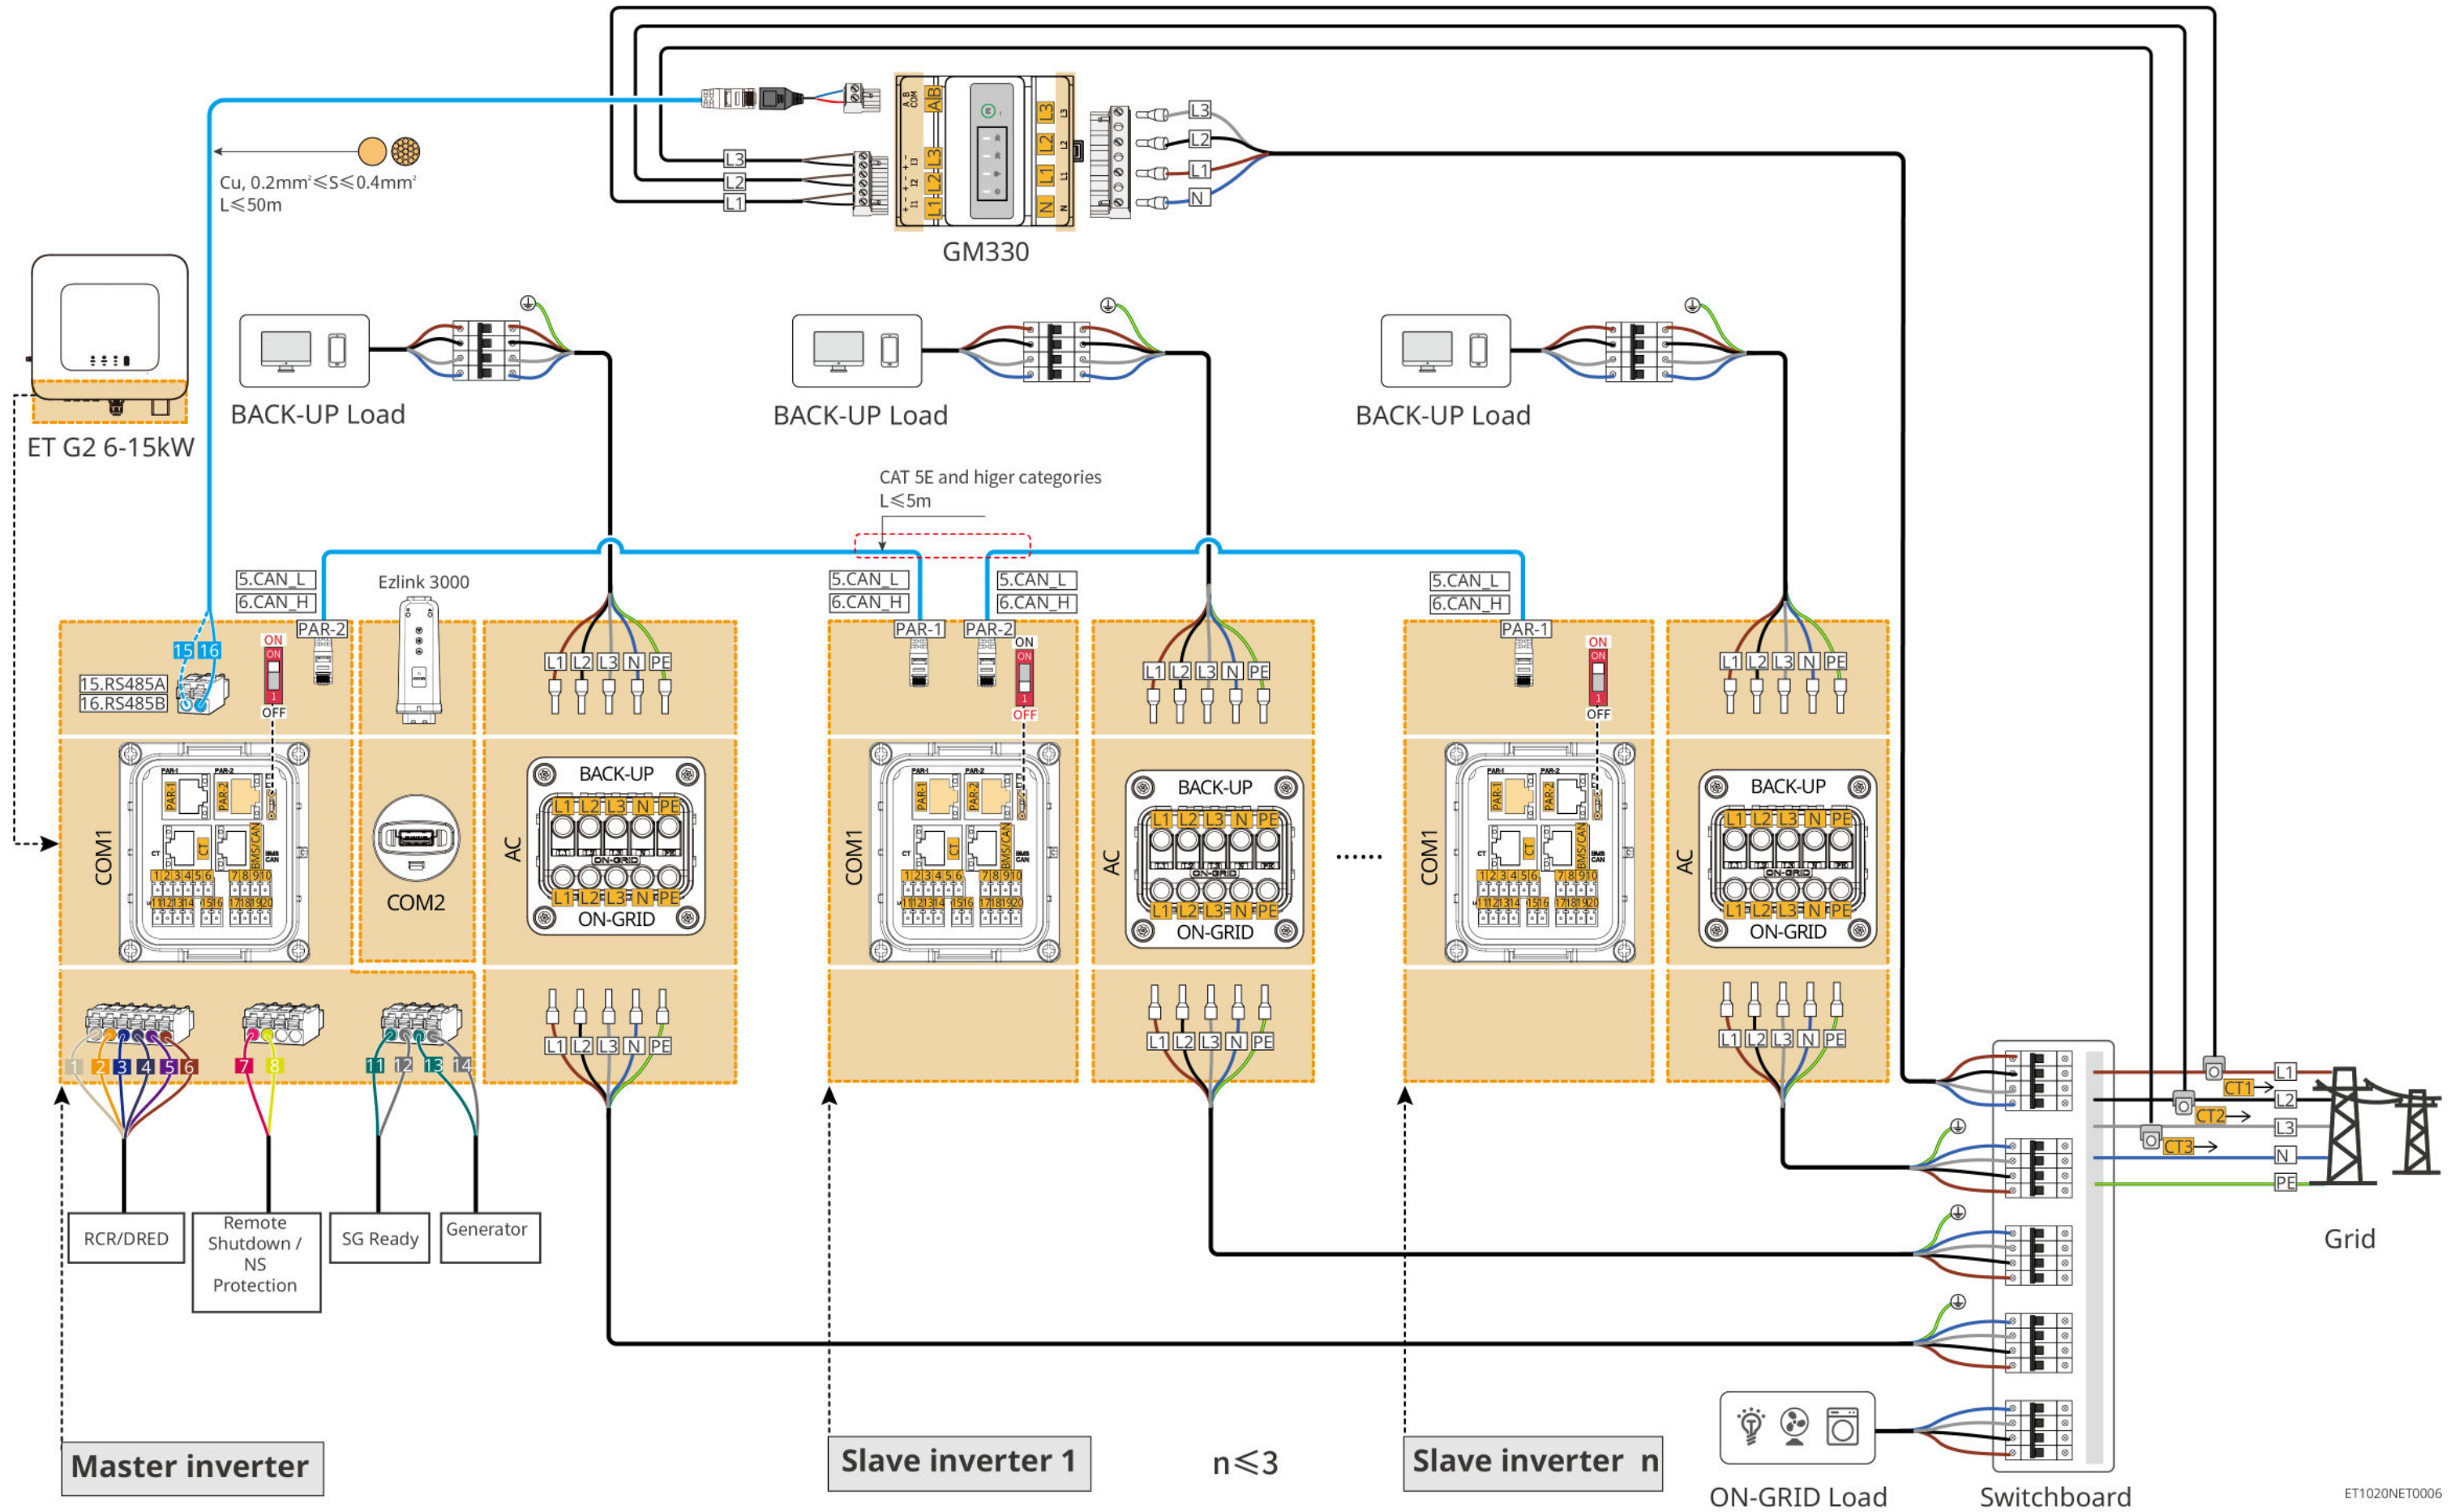

Battery System Wiring Diagram

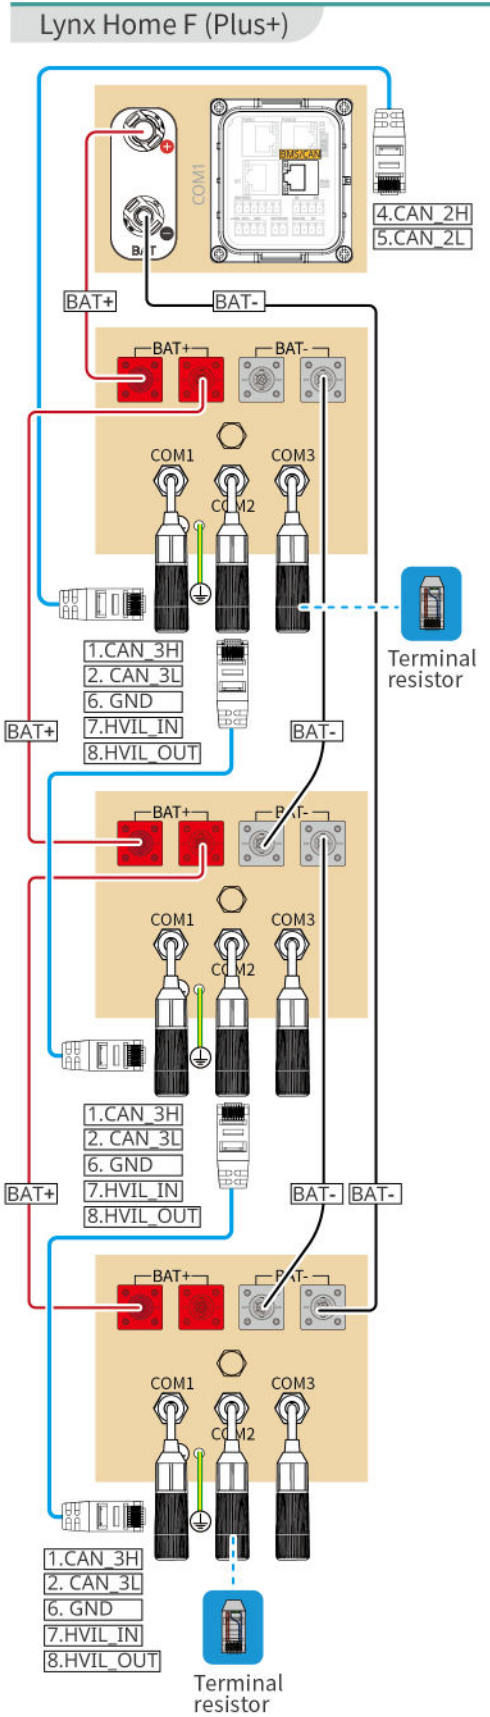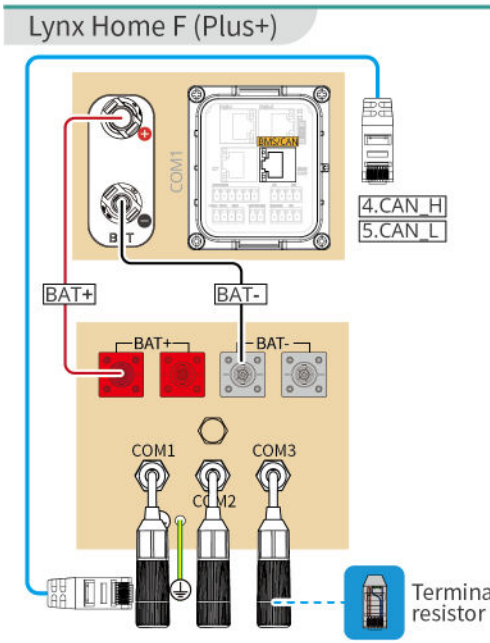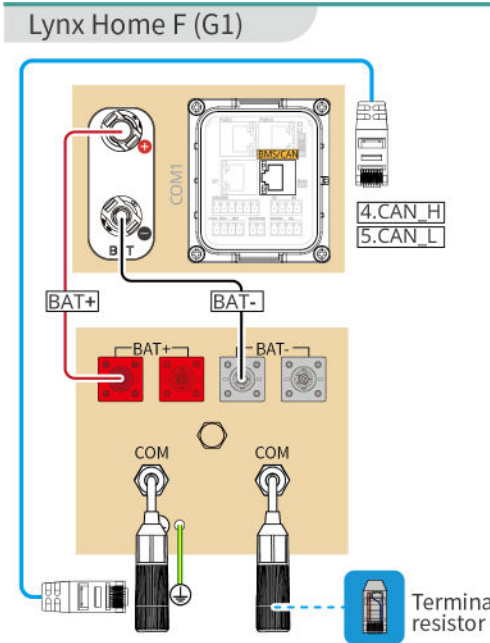

CAT 5E and higher categories

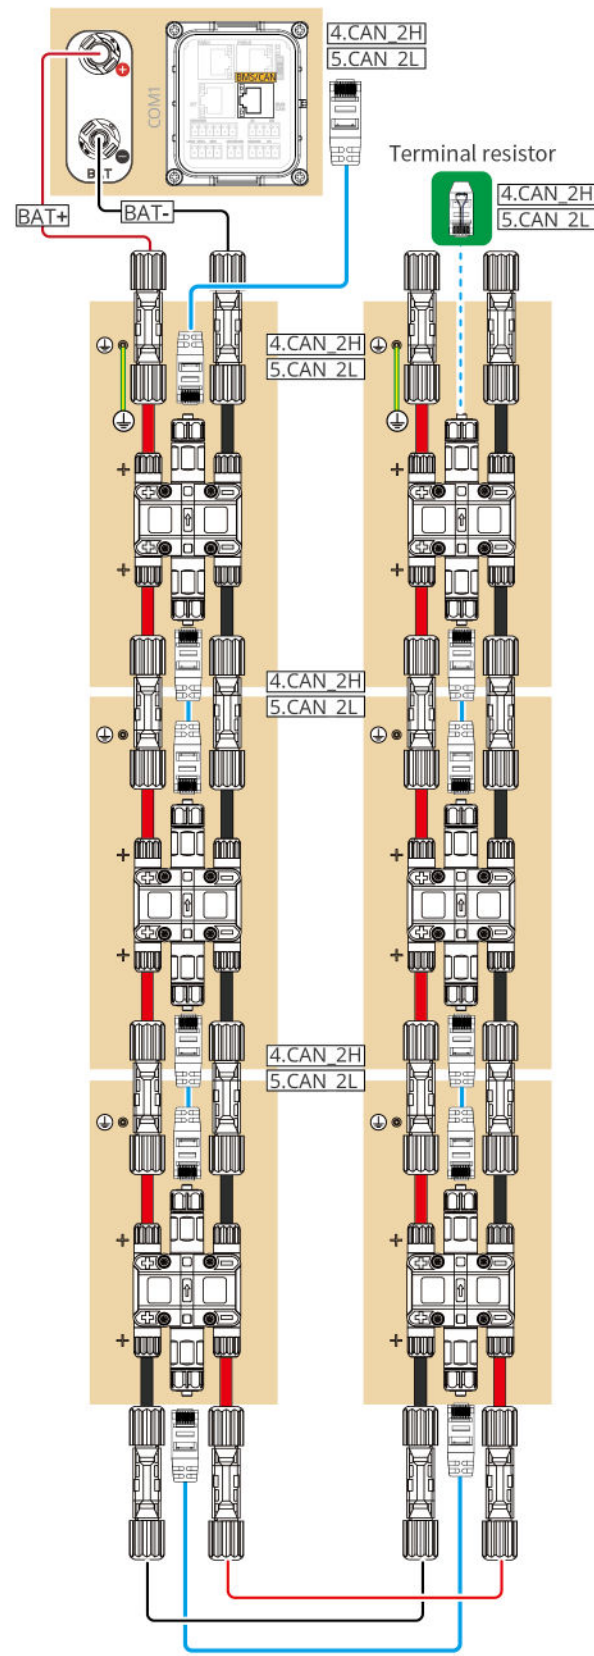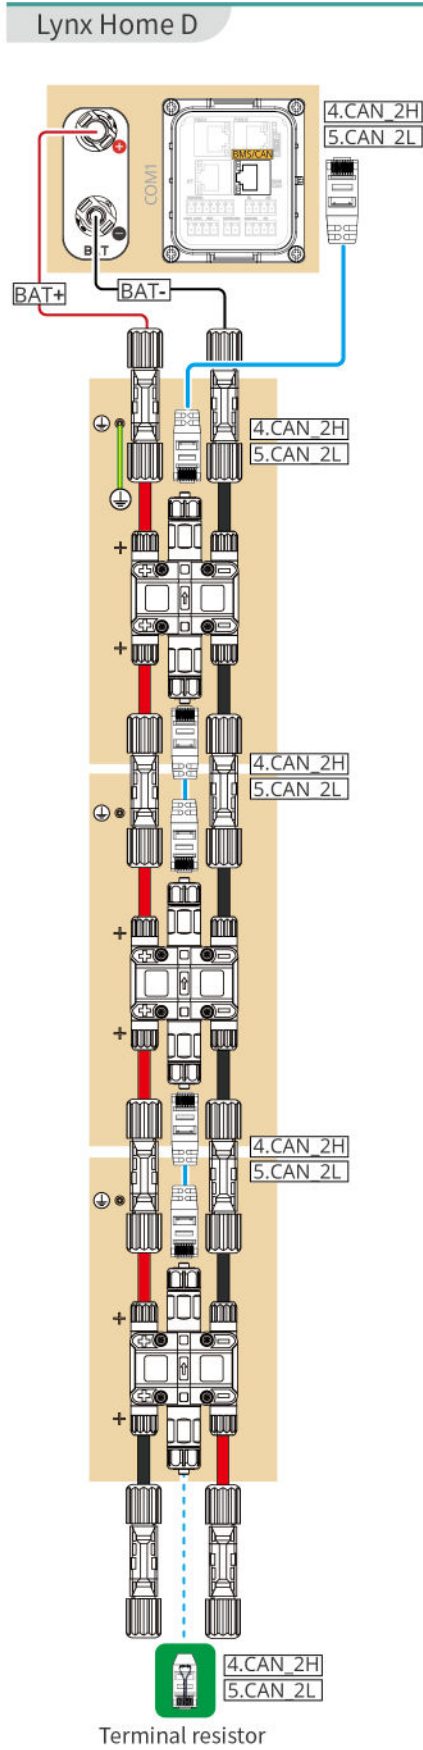

05 Equipment Commissioning




In parallel scenarios, the software version of SolarGo app should be 5.4.0 or above.
Follow the prompts to connect the device.


Quick Settings

Tap **Home > Settings > Quick Settings** to complete quick settings step by step.
Installer password: goodwe2010


Setting the Safety Code

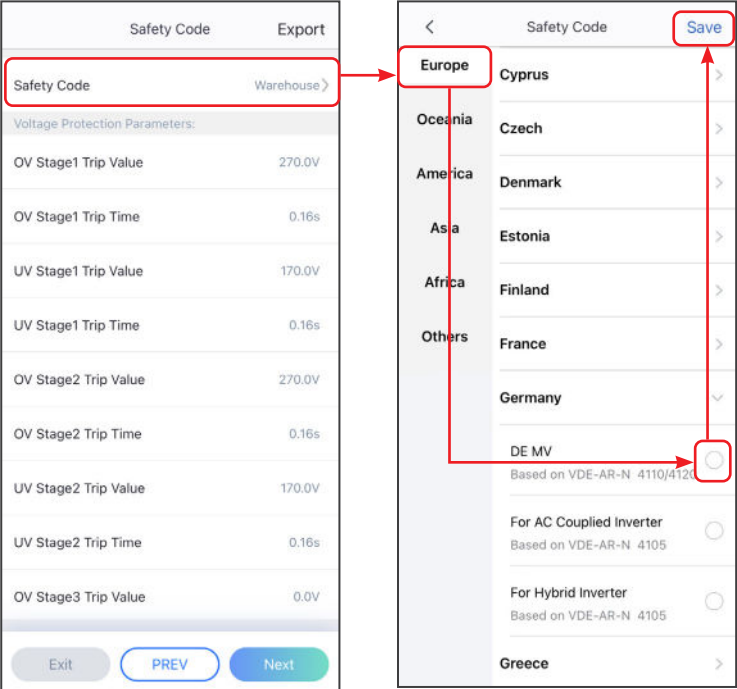



Setting Inverter Quantity (Only For Parallel Connections)

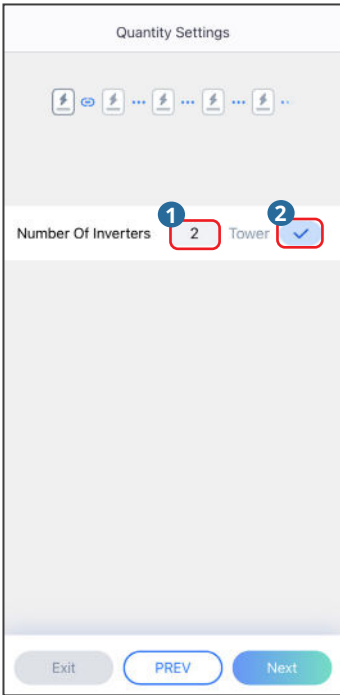

Setting the BAT Connect Mode

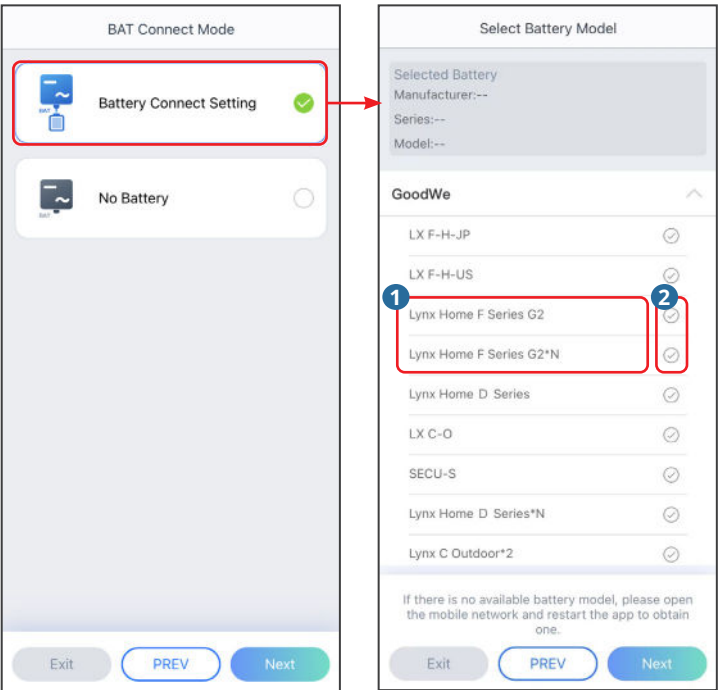


Setting the Working Mode

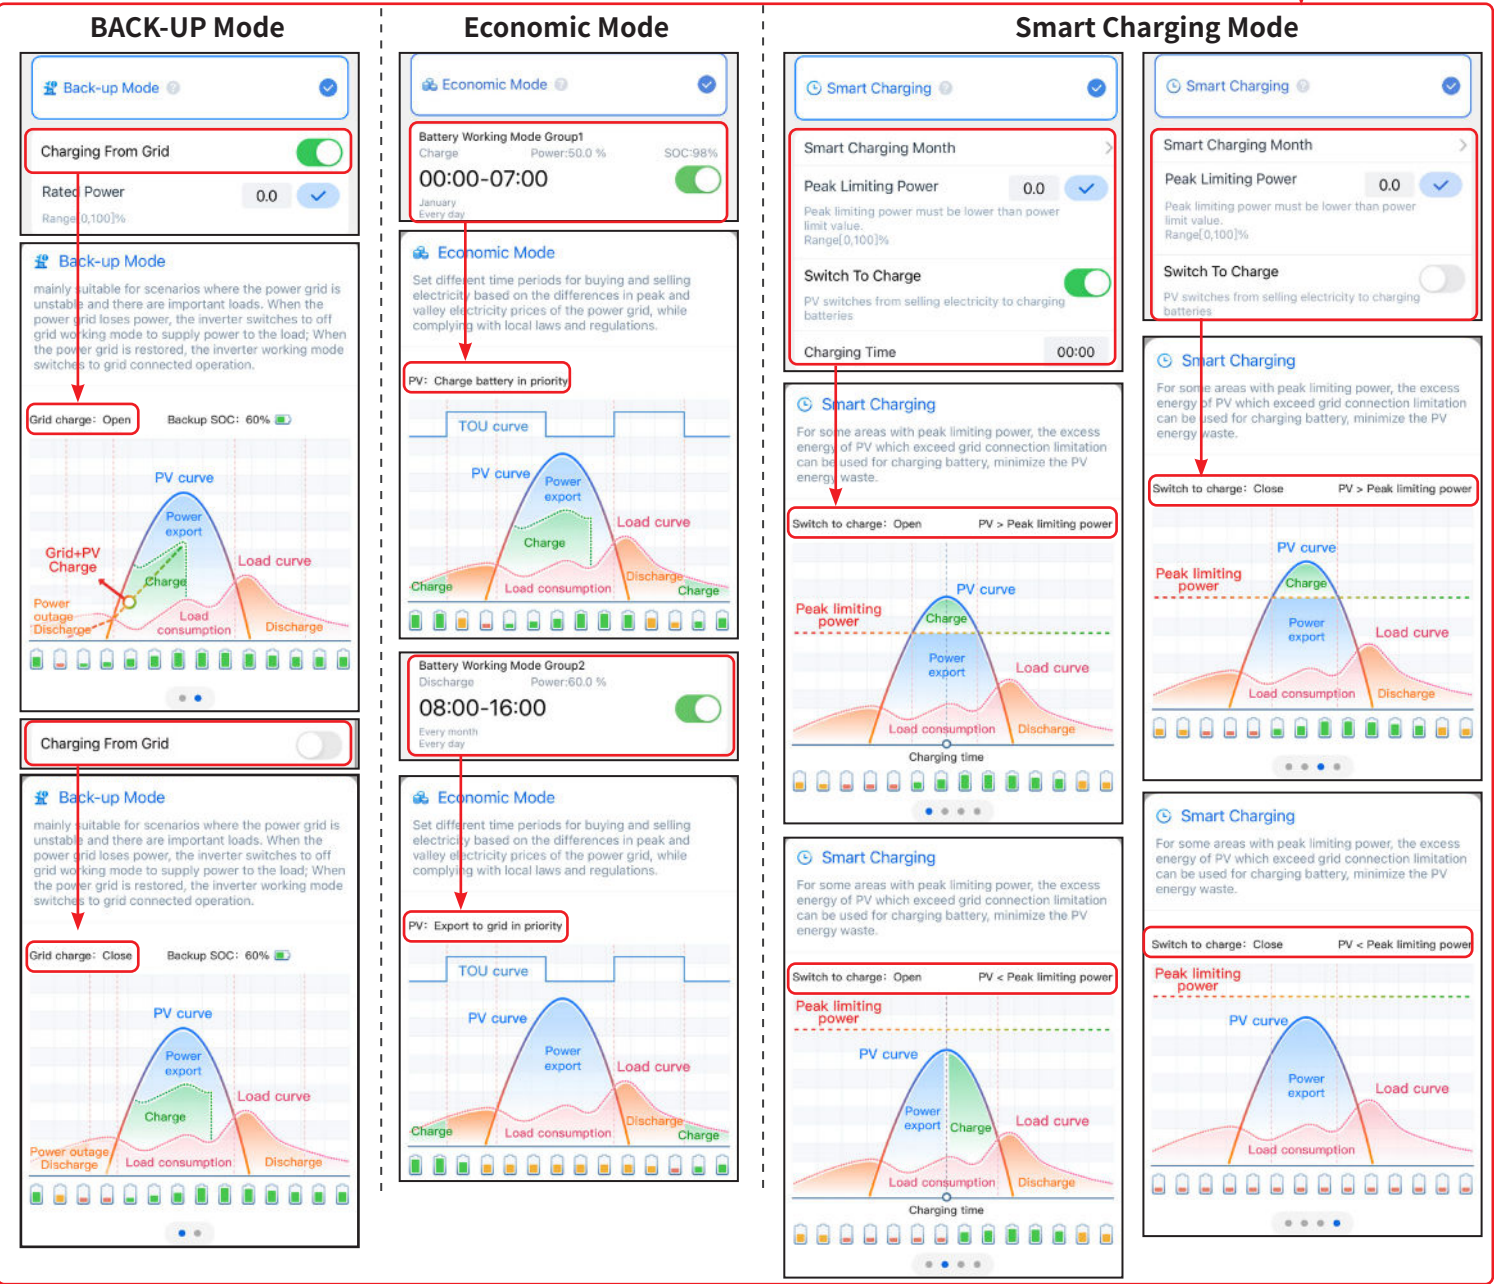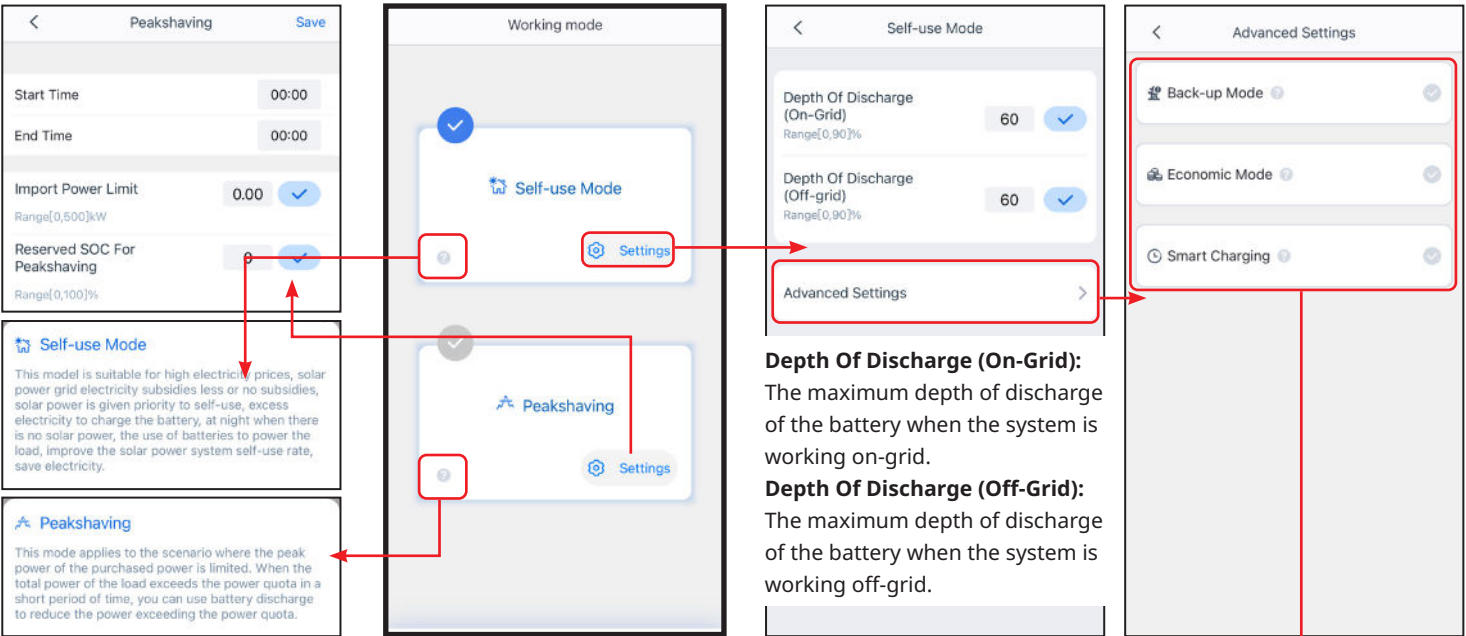

Setting Batteries Of Each Inverters (Only For Parallel Connections)


Follow the prompts to set the battery model and connection mode of each inverter.

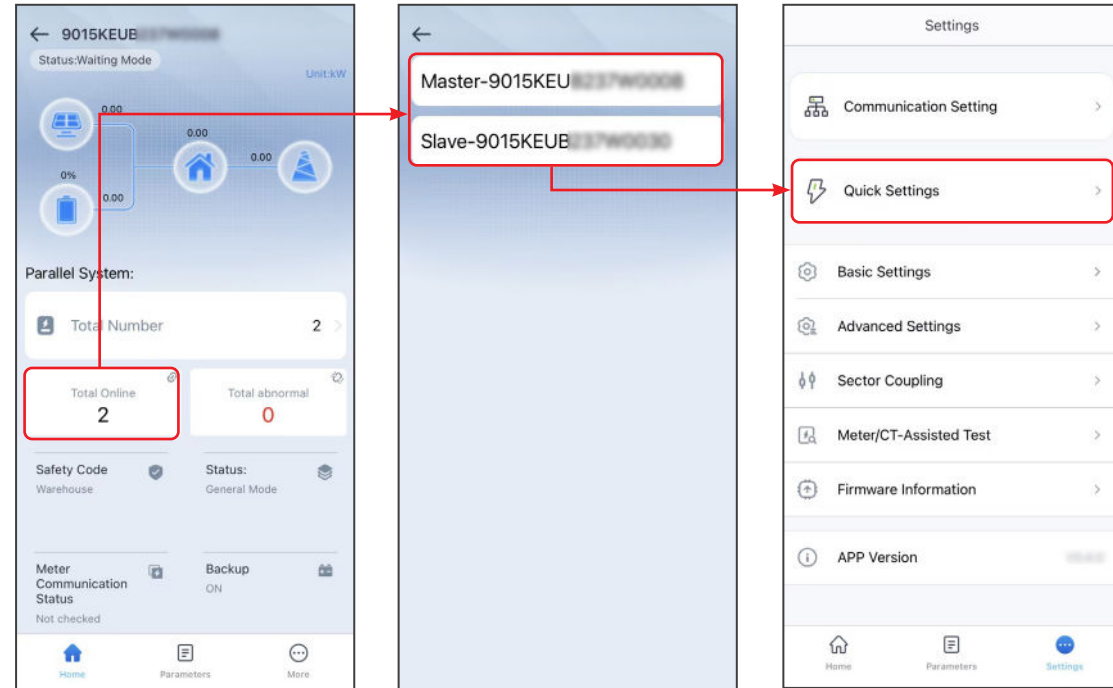

Setting the Advanced Parameters


Tap **Home** > **Settings** > **Advanced Settings** to set the following functions.

Setting DRED/Remote Shutdown/RCR or Three-phase Unbalanced Output Function (Optional)

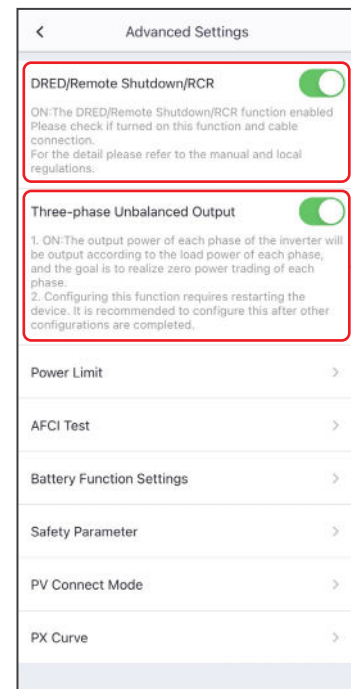

Enable **Three-phase Unbalanced Output** when the utility grid company adopts phase separate billing.



Setting the Power Limit Function

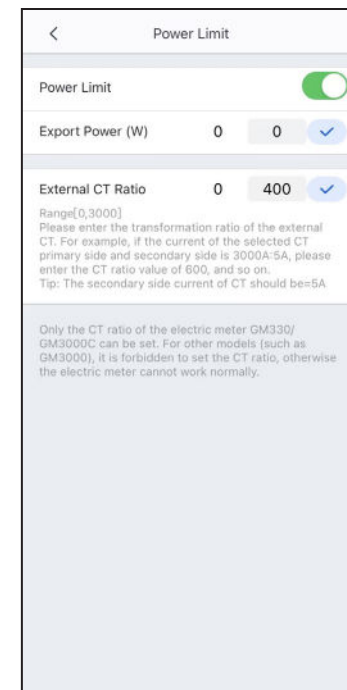


Configuring the Network

Tap **Home** > **Settings** > **Communication Setting** to set network parameters.

WiFi/LAN Kit-20

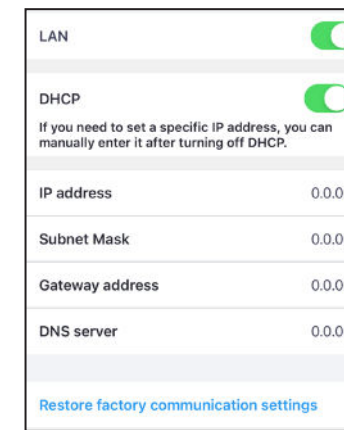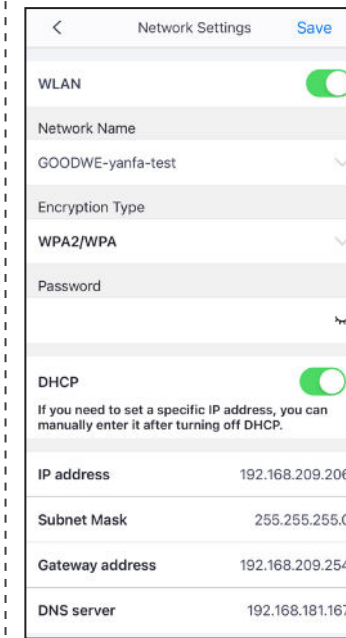





4G Kit-EC Or 4G Kit-AU

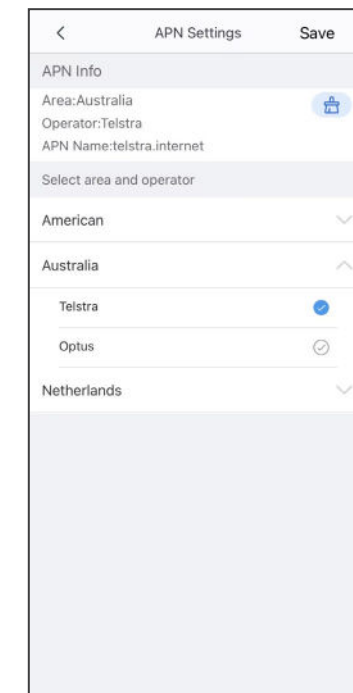

After configuring the APN, unplug the Bluetooth module and insert the 4G Kit EC or 4G Kit AU module.

Creating a Power Plant

Create power plants and add equipments via SEMS Portal app.

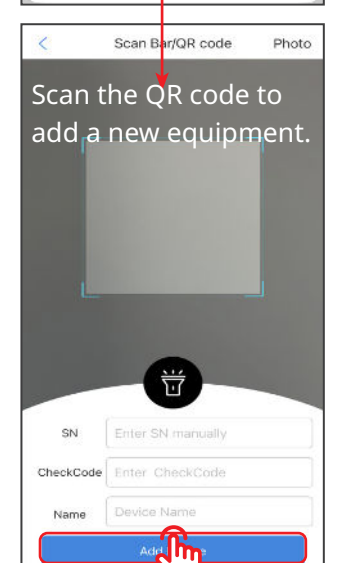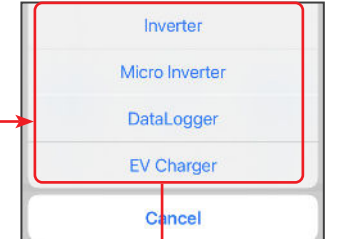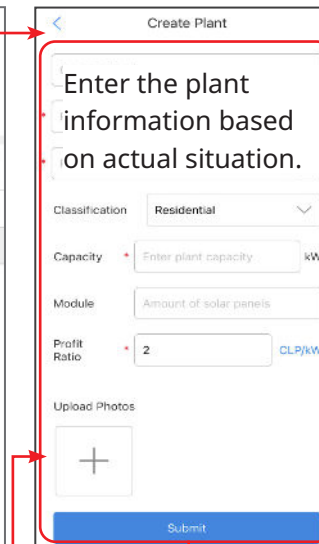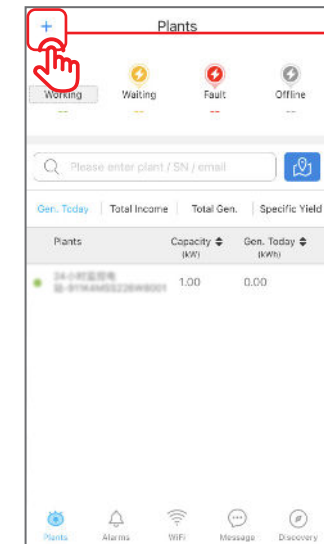

GoodWe Technologies Co., Ltd.
No. 90 Zijin Rd., New District,
Suzhou, 215011, China
www.goodwe.com
service@goodwe.com